


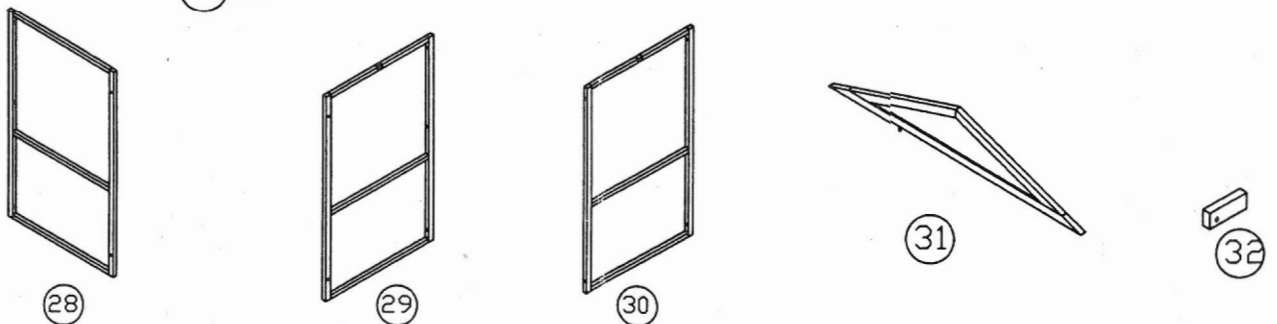
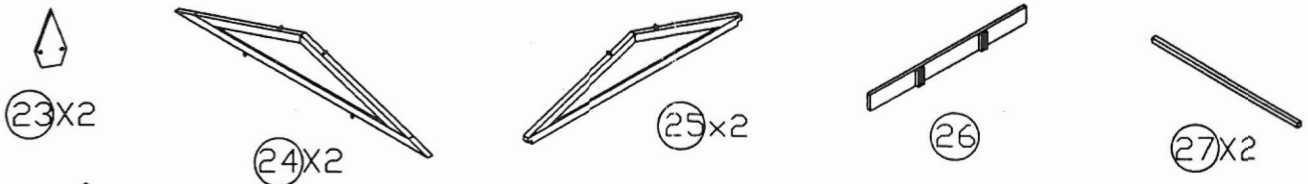
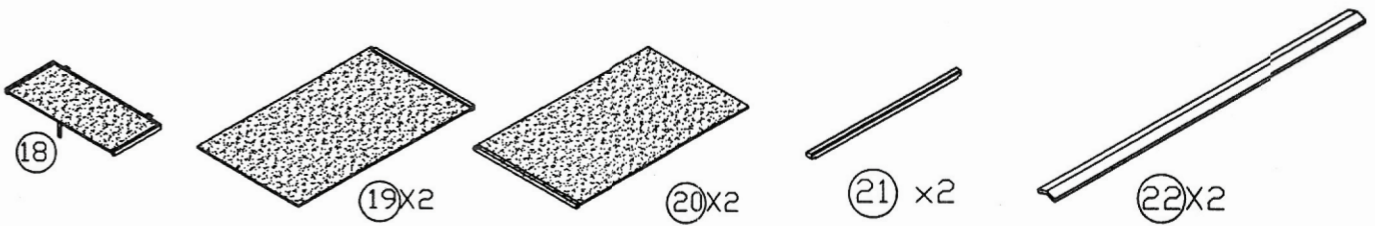
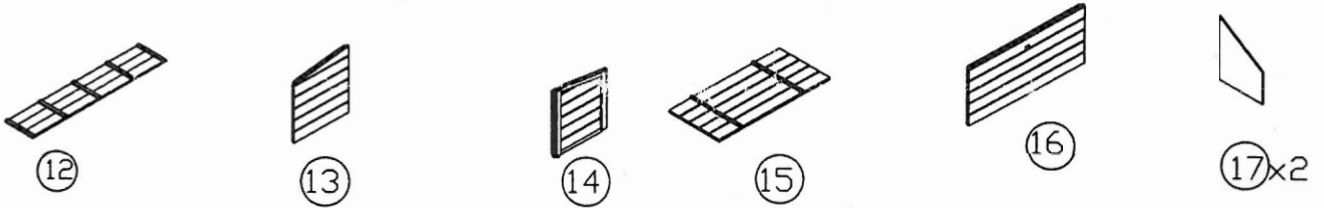
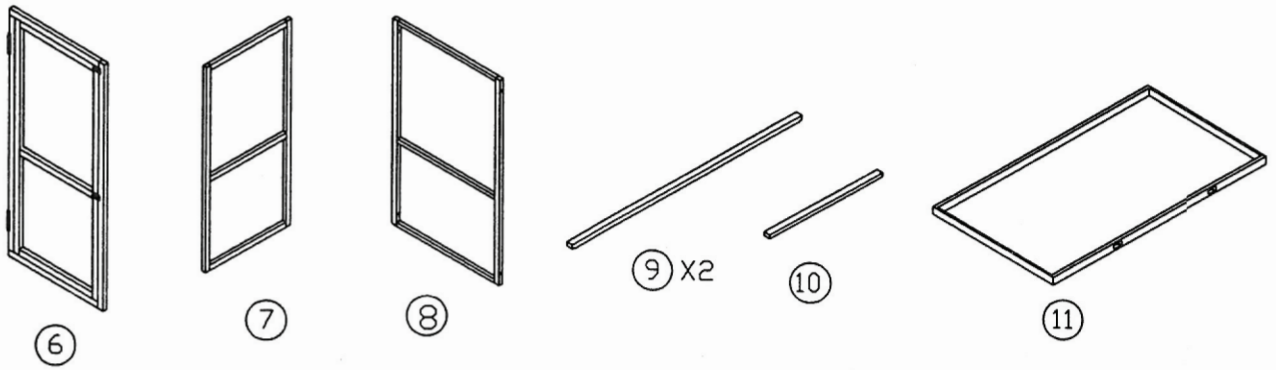



# ASSEMBLY INSTRUCTION

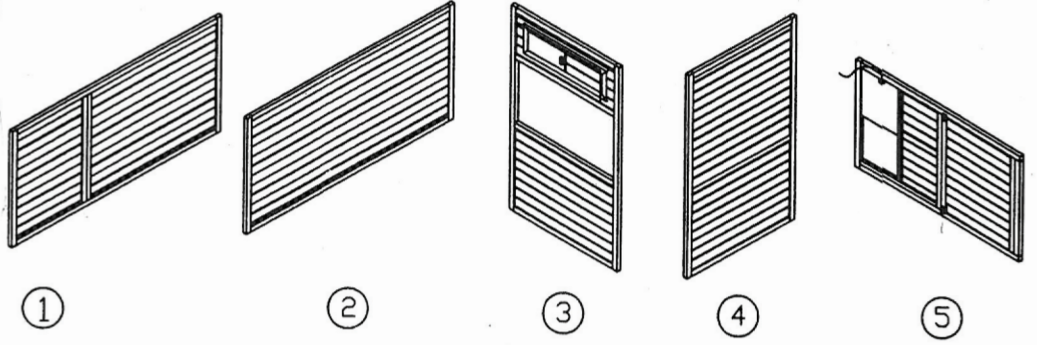


- A 3.5X60 41+2pcs
- B 3.5X35 34+2pcs
- C 3.5X25 22+2pcs
- D 3x16 6+2pcs
- E 3X30 1 PCS




 B 3.5X35 8pcs

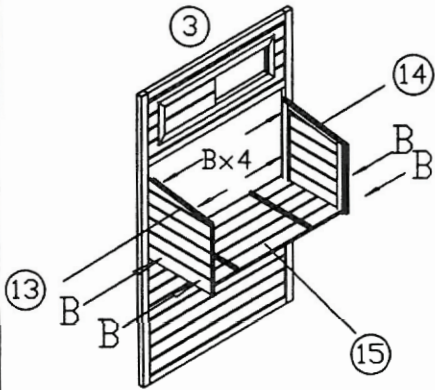


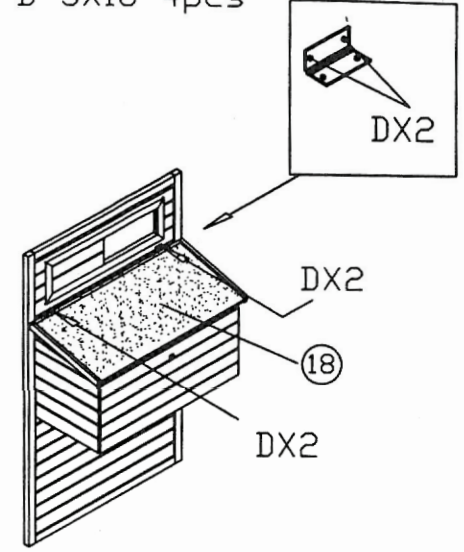
STEP 1

 C 3.5X25 2pcs  
B 3.5X3.5 4pcs

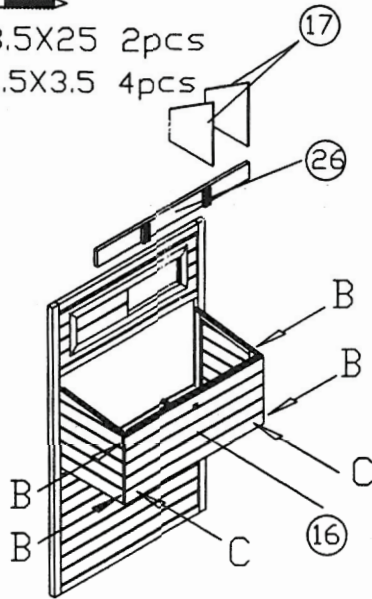


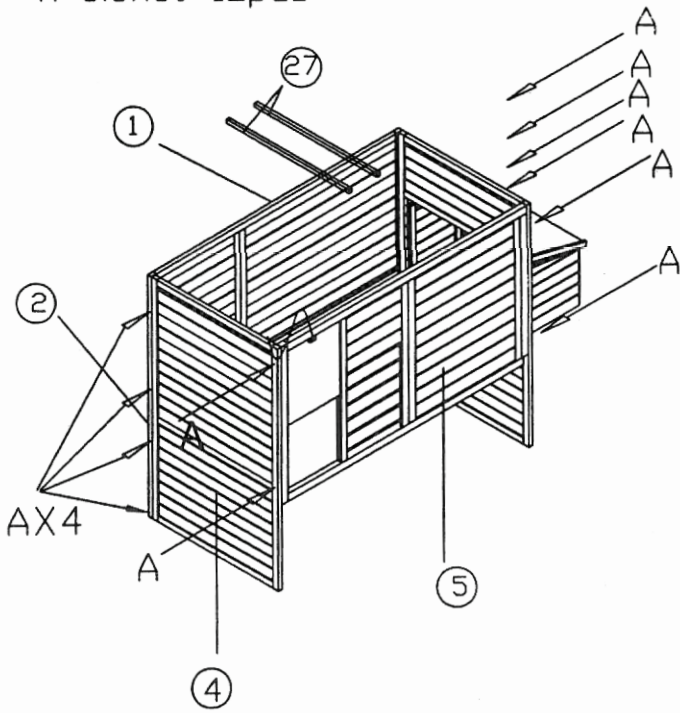
STEP 2

 D 3X16 4pcs




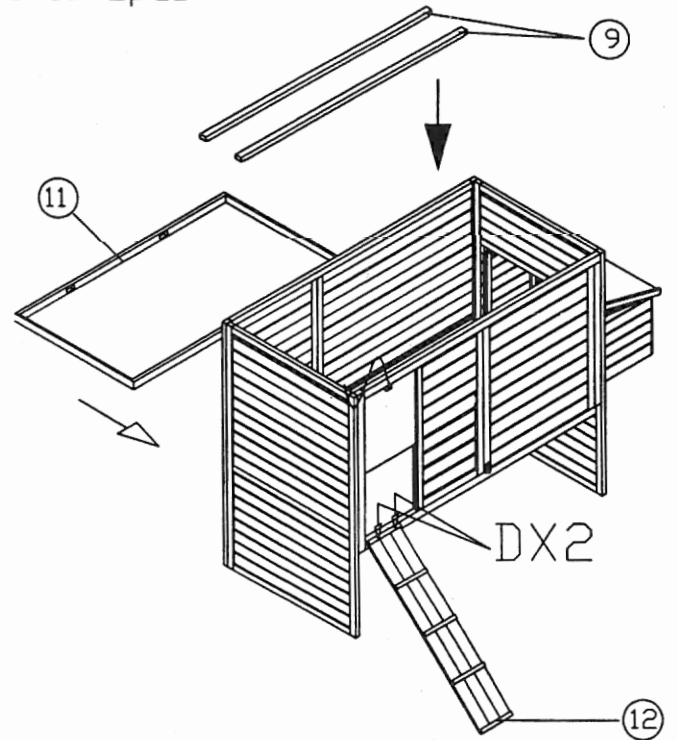
STEP 3

 A 3.5X60 12pcs



STEP 4

 D 3X16 2pcs




STEP 5

STEP 6




A 3.5X60 21pcs B 3.5X35 2pcs

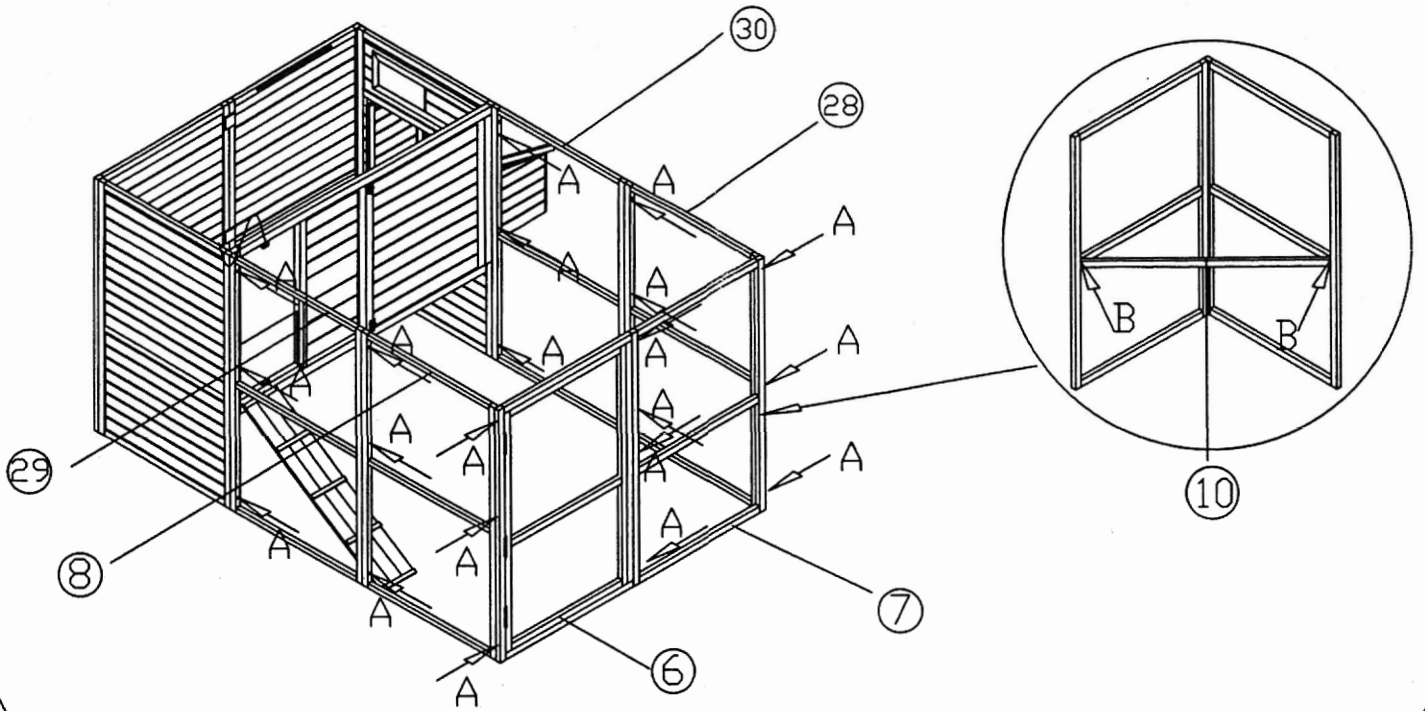

STEP 7




A 3.5X60 8pcs  
B 3.5X35 4pcs  
E 3.0X30 1PCS

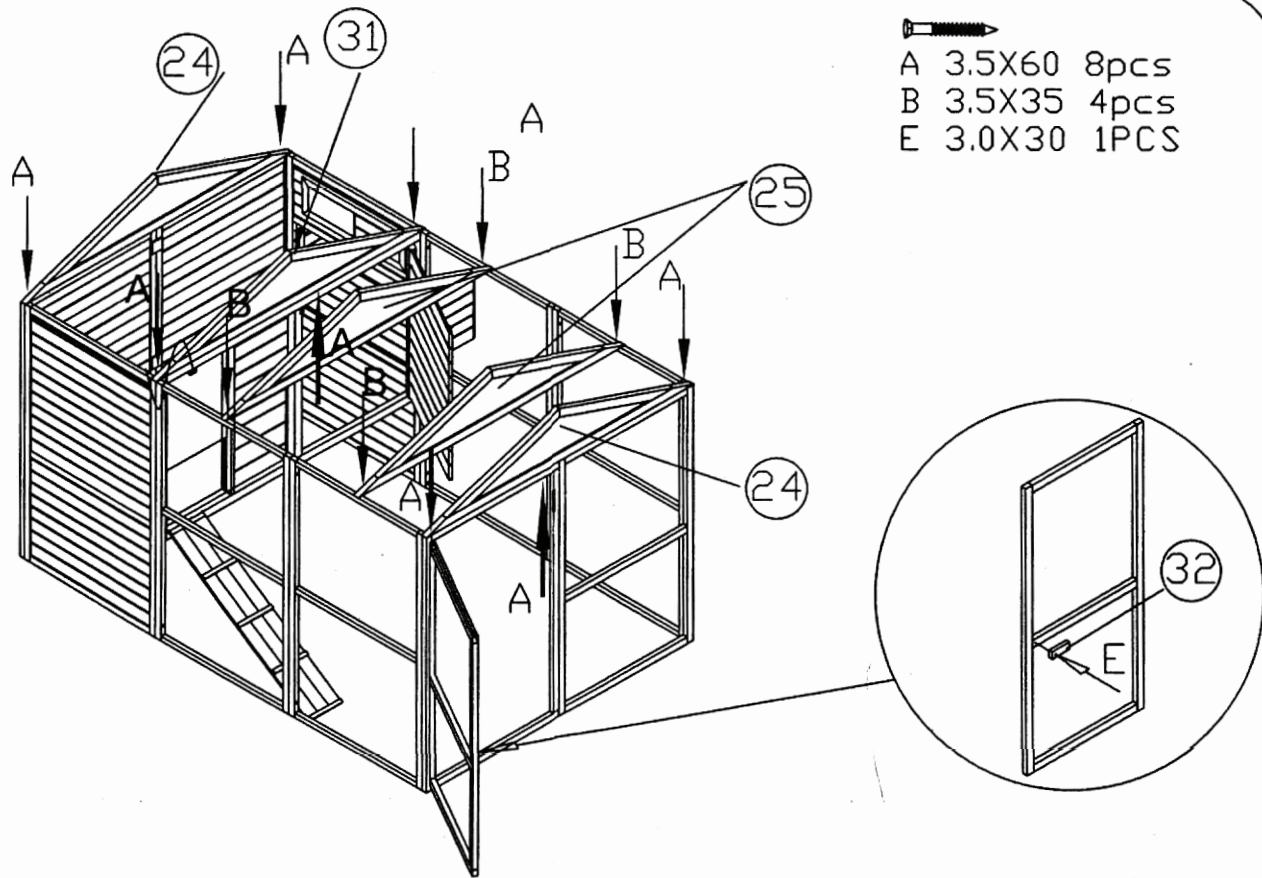


STEP 8



B 3.5X35 16pcs

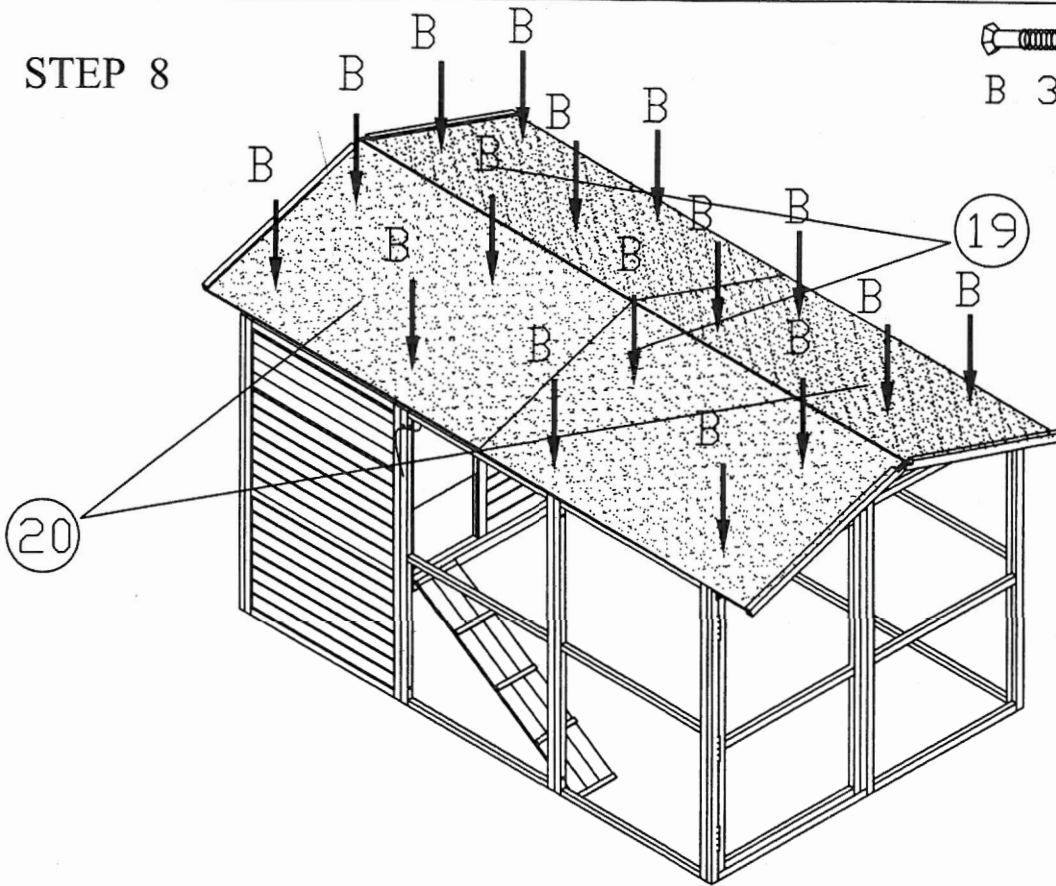

STEP 9

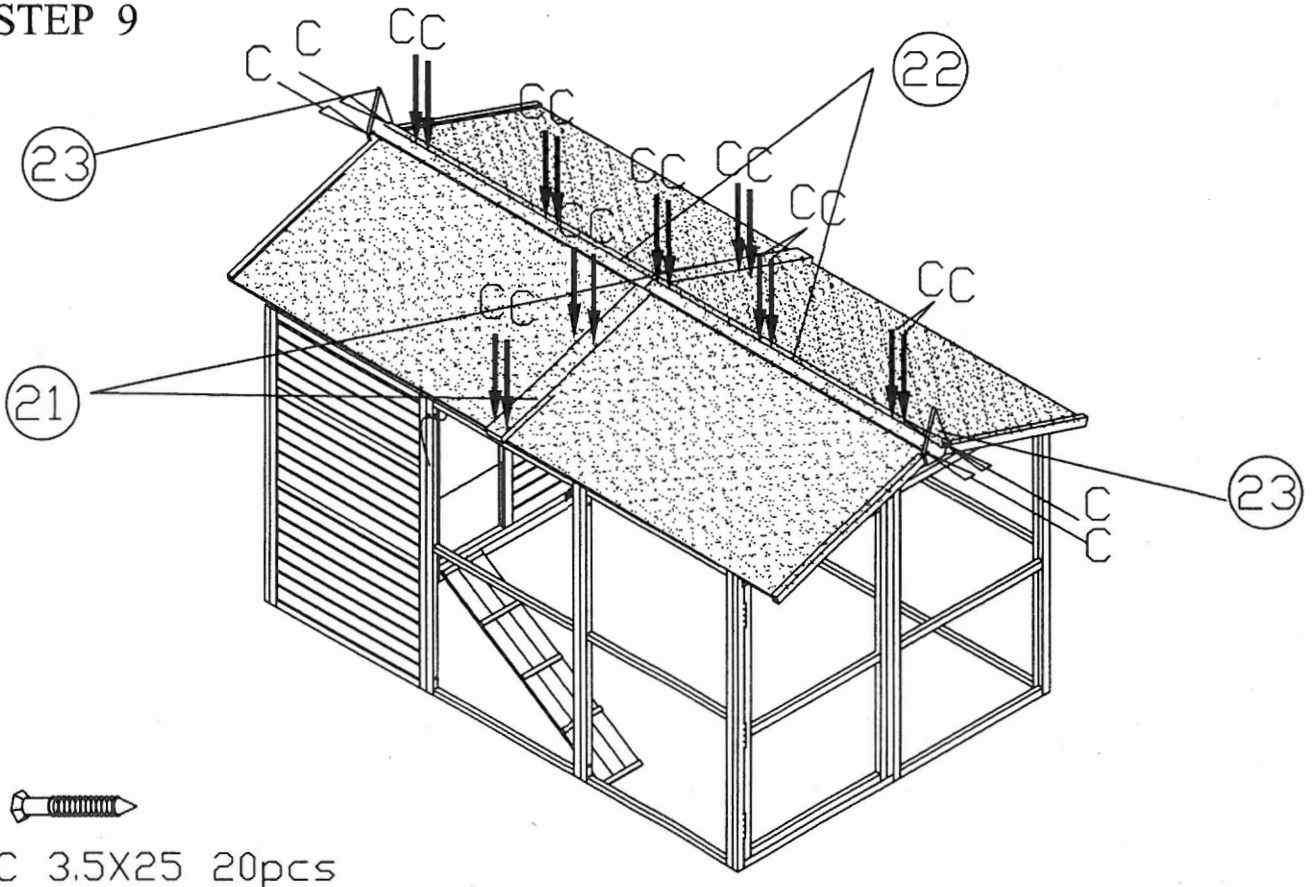

C 3.5X25 20pcs